




MINSTER

1949


www.minster1949.com



**Assembled by dedicated British craftsmen, a true heritage
timepiece for the modern watch market**

HOW TO USE

01-11

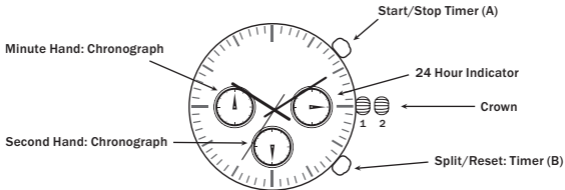

OPERATING INSTRUCTIONS

SETTING THE TIME


1. Pull the crown out to position 2
2. Turn the crown to set hour and minute hands
3. After the time has been set, push the crown back in fully to position 1.

SETTING THE TIMER

1. Press top pusher A to start/stop timer.
2. Press bottom pusher B to split/reset timer.
3. To reset stopwatch, press and hold button B.

HOW TO USE

12-18

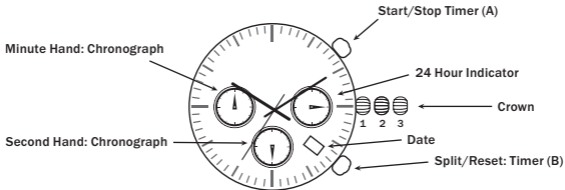

OPERATING INSTRUCTIONS

SETTING THE TIME

1. Pull the crown out to position 3
2. Turn the crown to set hour and minute hands
3. After the time has been set, push the crown back in fully to position 1.

SETTING THE DATE

1. Pull the crown out to position 2


2. Turn the crown counter-clockwise to set the date
3. After the date has been set, push the crown back in fully to position 1.
*If the date is set between the hours of around 9:00 pm and 1:00 am, the date may not change the following day.

SETTING THE TIMER

1. Press top pusher A to start/stop timer.
2. Press bottom pusher B to split/reset timer.

HOW TO USE

19-31

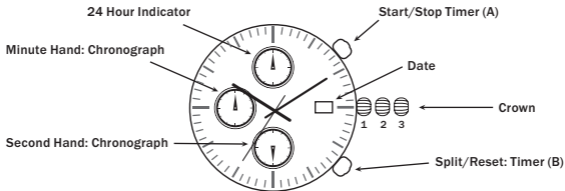

OPERATING INSTRUCTIONS

SETTING THE TIME

1. Pull the crown out to position 3
2. Turn the crown to set hour and minute hands
3. After the time has been set, push the crown back in fully to position 1.

SETTING THE DATE

1. Pull the crown out to position 2
2. Turn the crown counter-clockwise to set the date

3. After the date has been set, push the crown back in fully to position 1.
*If the date is set between the hours of around 9:00 pm, and 1:00 am, the date may not change the following day.

SETTING THE TIMER

1. Pull the crown out to position 3
2. Press top pusher A to start/stop timer.
3. Press bottom pusher B to split/reset timer.
4. Push the crown back in fully to position 1.

WATER-RESISTANT

The water-resistance of your watch cannot be permanently guaranteed. We therefore recommend that you have the water-resistance of your watch checked and examined at an authorized service center every 12 months and every time you change the battery in a quartz watch.

The table below outlines general guidelines of the water-resistance you will receive from an accordingly rated watch.

3 ATM – Water-resistant 30 meters – 3 Bar	Splash proof and water-resistant to small amounts of water. NOT suitable to be submerged in any form of water.
5 ATM – Water-resistant 50 meters – 5 Bar	Can be submerged in water such as light washing up. Suitable for swimming, but not guaranteed to be resistant to jumping into the pool. No snorkeling and water-related work. NOT suitable for diving.
10 ATM – Water-resistant 100 meters – 10 Bar	Suitable for swimming and snorkeling. NOT suitable for deep sea diving.


NOTES:

No leather strap should come in contact with water.

When changing the time or date remember to insert the crown fully back into place to ensure head casing is airtight.


No watch is waterproof, these watches are water-resistant according to static pressure to a certain level, please see the case back of your watch and check with the table above. If you are not sure do not use your watch near water.

HOW TO CHANGE THE QUICK RELEASE STRAP

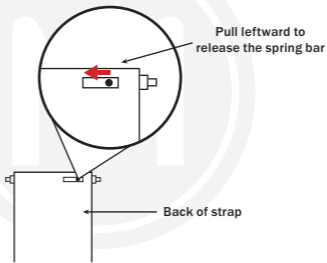


MESH STRAP

1

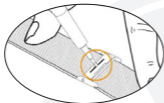


Push the folding clasp up by using a small screwdriver taking care not to scratch the strap or clasp

2

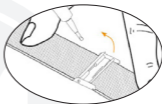


Adjust the length

3

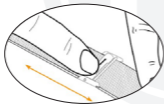

Choose suitable size

4

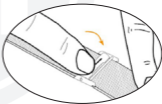

Close folding clasp

CARE OF YOUR WATCH

LOOKING AFTER YOUR MINSTER 1949

- Protect your timepiece from falling and sharp objects.
- Keep your timepiece away from high temperatures including hot water and strong magnetic fields in order not to influence the running accuracy.
- When changing the time or date remember to push the crown in fully as to not let in any water.
- Leather straps must not be immersed in water.
- Check the water-resistant levels of your watch to determine what you can or can't do with your watch in water.
- The battery in a quartz watch is inserted into the watch at origin and may not last the length of warranty and therefore is not covered by the warranty.
- When needing to change your battery in a quartz watch remember to get the watch resealed correctly to maintain the water-resistant level.
- To reduce or add links to your bracelet take the pins out in the direction of the arrows on the inside on the bracelet.
- We recommend that you should take your watch to a qualified watch repair centre to change the battery and change the bracelet size. Any scratches on the bracelet are not covered by the warranty.
- Clean your watch with a soft damp cloth.
- After saltwater use, rinse under tap water and wipe dry.
- Metal watch bands should be washed periodically to keep them looking smart. Clean with a soft brush or cloth dipped in warm soapy water, be sure to thoroughly wipe dry with a clean cloth.
- Remember to register your watch at www.minster1949.com for the 2-year warranty.

CONTACT DETAILS

POSTAL ADDRESS:

PO BOX 2044,
Croydon,
CR90 9JZ,
United Kingdom

EMAIL:

mail@minster1949.com



/Minster1949

WARRANTY

Register your warranty at
www.minster1949.com

where you can find our full terms and conditions
as well as our contact details.

Our warranty is only valid when purchased from an official stockist
of Minster 1949 watches. The warranty is not valid if purchased from
any third-party unofficial stockist.



SERVICE



This warranty covers the watch movement against manufacturing defects for 2 years from the date of purchase. Within this period you may send your watch to the repair centre along with the handling & transportation fee of £24.95. Minster 1949 cannot accept responsibility for damage or loss caused in transit. We recommend that you send your watch into us using a postal tracking service, with the watch in a padded jiffy envelope with your full contact details and explanation of work needed enclosed within.

The repair centre address:
Minster 1949, PO BOX 2044,
Croydon,
CR90 9JZ
United Kingdom

IMPORTANT: Not Covered by Warranty

1. Batteries, Case, Crystal (Lens), Stones, Strap or Bracelet.
2. Damage resulting from improper handling, lack of care, accidents or normal wear and tear.
3. Water damage.

Your statutory rights are not affected.

NOTES



NOTES





www.minster1949.com